

Thank you for purchasing the Universal Mount Kitty Sill with Cardboard Track™ designed by K&H Pet Products®.
When used correctly, your Kitty Sill should provide hours of entertainment, scratching and window viewing for your cat.

INSTRUCTIONS

Please read all instructions carefully before installation.

- 1** Lay all parts out on a flat surface. Locate the black kitty sill frame, the 3 suction cups, and the 3 clear plastic locking pins. Clean the suction cups to ensure proper adhesion to your window.
- 2** Now locate the 3 circular open holes on the mounting base attached to the back of the Kitty Sill black frame.
- 3** Insert a suction cup into one of the open holes. Holding the suction cup in place, insert a plastic locking pin into the side of the suction cup as shown. See **Figure 1**. Push the pin all the way through the hole until it locks into place. Once the pin is locked into place you should not be able to remove it from the suction cup. The suction cup is now locked into place on the base of the Kitty Sill frame.
- 4** Repeat the above steps with the remaining two suction cups until all 3 are installed onto the frame of your Kitty Sill.
- 5** Next, turn the Kitty Sill upside down and locate the two legs. See **Figure 2** for the direction in which the legs should be installed on the bottom.
- 6** Make sure the leg is facing in the correct direction with its 3 pegs facing towards you and the back of the Kitty Sill facing away from you. See **Figure 2 and Figure 3**.
- 7** Insert the pegs into the holes and pull towards you until the leg snaps snugly into place. See directional arrow in **Figure 3**. You should hear a resounding snap. Repeat these steps with the second leg making sure to use the same hole placement as the first side.

Next, hold the Kitty Sill up to your window to be sure that it's level. Do not attach suction cups to window at this time. If the Kitty Sill is not level, snap the legs into another position. Once level, proceed to the next step and install the cardboard scratcher platform onto the black Kitty Sill frame.

ATTACHING THE CARDBOARD SCRATCHER TO THE KITTYSILL FRAME:

- 8** Turn the Kitty Sill over right side up and locate the two sets of hook and loop pieces. Do not pull the hook and loop pieces apart from one another. Pull away the backing tape from only one side of each hook and loop set. Lay the two sets sticky side down on the black kitty sill frame in the position shown in the photo. See **Figure 4**. Press down to ensure good adhesion to the frame.
- 9** Next, pull the remaining backing tape away from each hook and loop set to expose the remaining sticky side. Position the cardboard scratching platform, toy side up, onto the center of the frame. Press firmly in the two areas where the hook and loop sets were placed to ensure good adhesion. You can now attach the Kitty Sill to a window.

INSTALLING YOUR KITTYSILL ONTO A WINDOW:

- 10** **VERY IMPORTANT:** Using glass cleaner, thoroughly clean and dry the window that will accommodate your Kitty Sill.
- 11** Press each of the 3 suction cups firmly against the glass. See **Figure 5 & 6**. Re-adjust them if needed. At this time, make any further adjustments to the legs and suction cups to achieve a level surface for your Kitty Sill.

Congratulations! You have now given your kitty an innovative K&H Kitty Sill that will provide them with hours of enjoyment and interactive playtime.

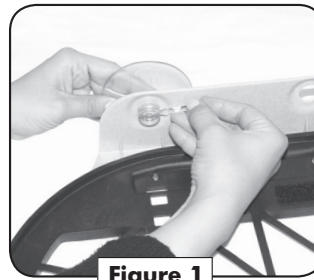 


Figure 1

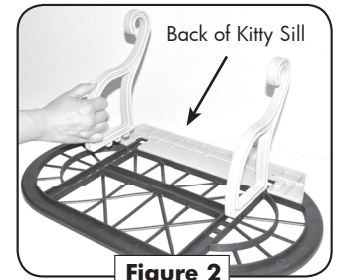 


Figure 2

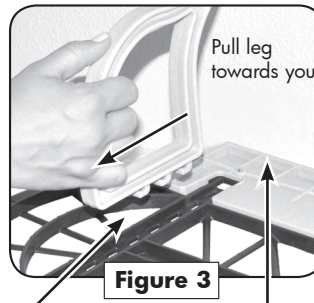 


Figure 3

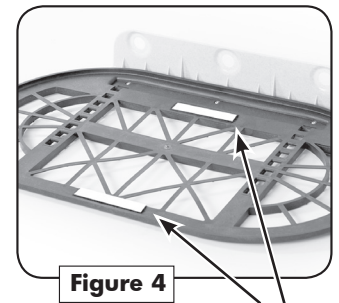 


Figure 4

3 pegs facing towards you

Back of Kitty Sill facing away from you

Stick the 2 attached hook and loop sets here.



Figure 5



Figure 6

Caution: As with any suction cup, debris, temperature changes, sunshine and excessive use can weaken the holding power. We recommend removing the suction cups at least once per month to clean the window area, clean the suction cups and then re-install them for optimal strength.



K&H Limited One Year Warranty

Our warranty is as follows: K&H Pet Products warrants to the original consumer, that this product will be free of defects and workmanship for a period of one year from the date of purchase. The manufacturer's liability hereunder is limited to replacement of the product. This warranty is void if the product has been damaged by accident, unreasonable use, neglect, tampering, or other causes not arising from defects in material and workmanship.

To exercise your warranty: If, during the warranty period, your product malfunctions, return it to the place of purchase with your **original purchase receipt**. If this cannot be done, return the product, postage prepaid, to K&H Pet Products, with a **dated proof of purchase or original date receipt**. A return authorization number can be obtained by calling (719) 591-6950 and must accompany all returns to manufacturer. Please include a note explaining the problem when returning the product.